

## Update R4S dongle firmware to change payload


1. Connect R4S dongle to computer through MICRO USB cable.



2. Double click the button on top dongle. A new drive named R4S will come out in windows file explorer.



3. Drag and Drop new UF2 file from source to R4S drive, select replace when you are asked.

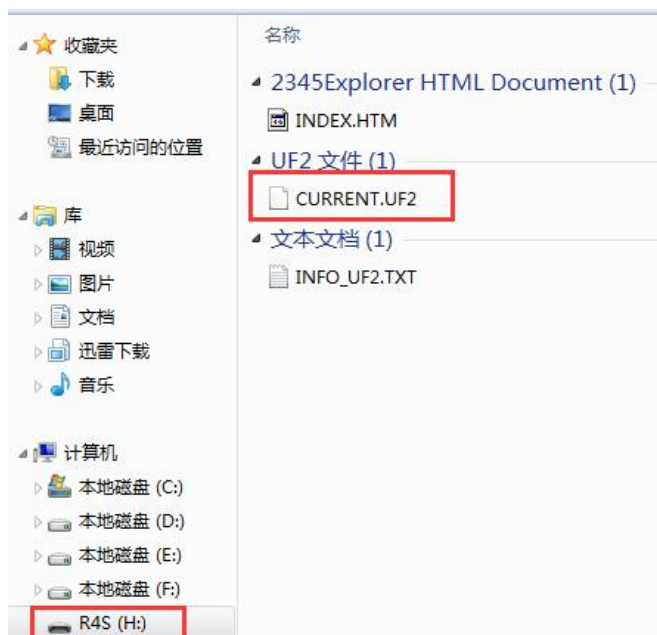

4. When R4S drive disappear from windows file explorer, update finished successfully.

UF2 File for atmosphere custom firmware:

**MEGA** <https://bit.ly/2CMwz0V> OR **MediaFire** <https://bit.ly/2Qo9cxx>

UF2 File for ReiNX custom firmware:

**MEGA** <https://bit.ly/2Qr0BdJ> OR **MediaFire** <https://bit.ly/2QoHH6X>

UF2 File for SX OS:

**MEGA** <https://bit.ly/2MzDGgV> OR **MediaFire** <https://bit.ly/2MsYvwm>

UF2 File for any third payload custom firmware:

**MEGA** <https://bit.ly/2Qwc77g> OR **MediaFire** <https://bit.ly/2Nf0gww>

(Note: Copy any third party payload named 'payload.bin' to the root of your microSD card, the payload will run as soon as you power on your switch! or if not, running hekate4.0 as default.)